

## DeLaval start signal block valve installation instructions

The DeLaval start signal block valve must be connected as illustrated.


The valve is installed to prevent the BB to receive a wash signal when the rear plate active after milking.

The valve blocks the wash signal when the exit gate is open.

Connect the tee to the robot exit gate air tube, where there is pressure, when the exit gate is closed.

Connect to BB Wash start signal sensor. Use a blue 4/2mm PELD tube

Connect the tee to the robot exit gate air tube, where there is pressure, when the exit gate is open.

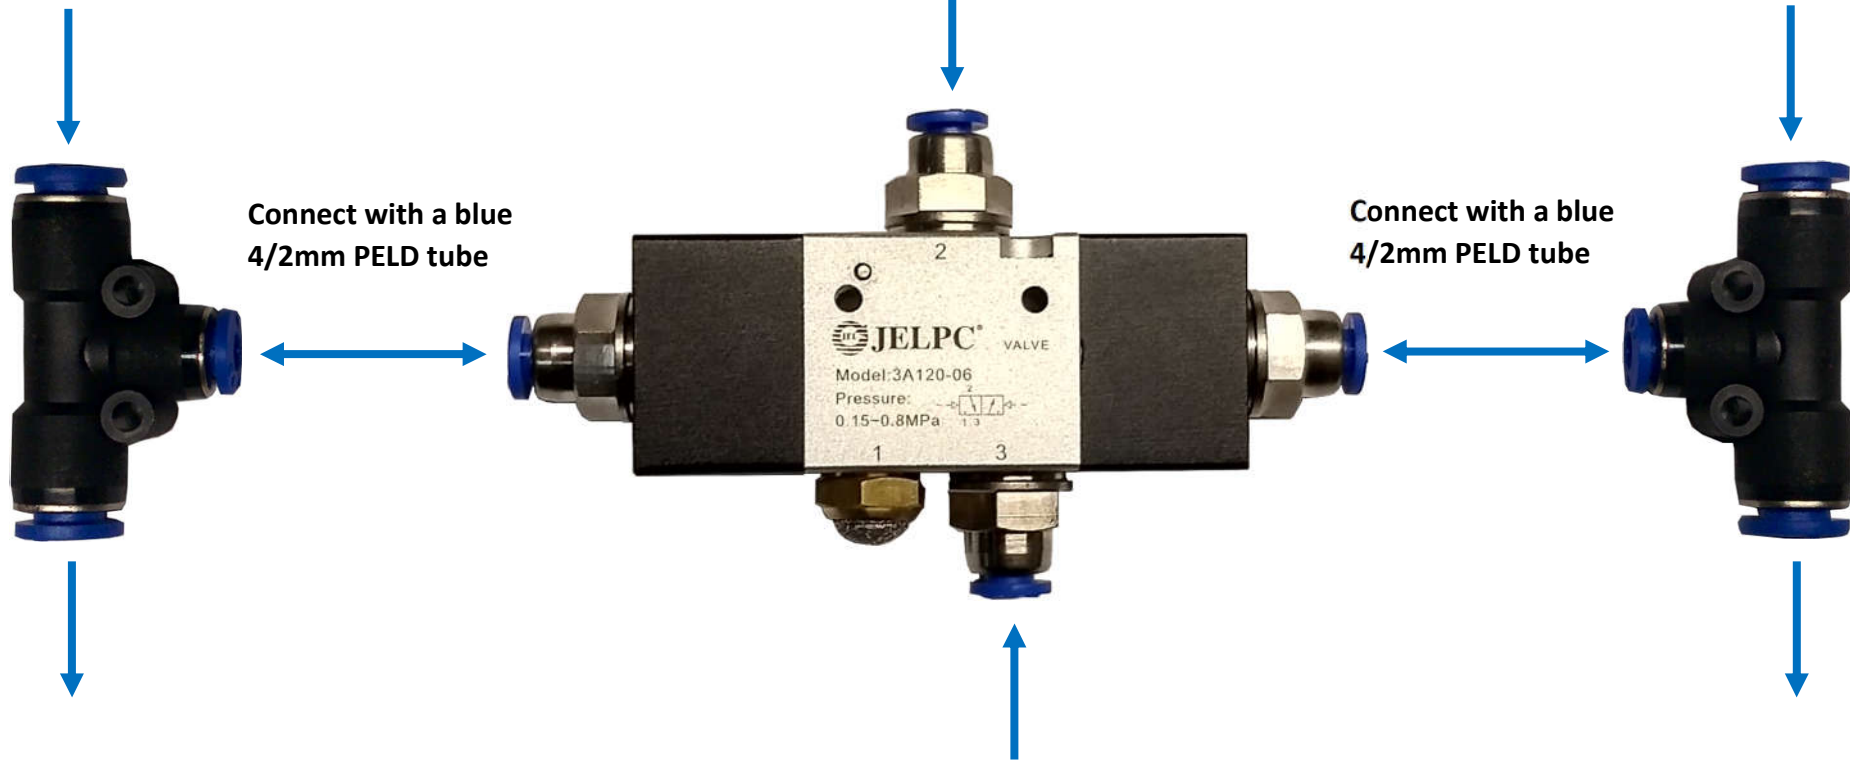

Connect to the robot rear plate air tube, where there is pressure, **when the rear plate is active**. Use a blue 4/2mm PELD tube and the included 6/4/6 mm push-in tee.