


# BOVIBOOSTER | L4DL

## DISASSEMBLING, CLEANING AND REASSEMBLING BOVIBOOSTER SOLENOID VALVES

EV220B (big valve)

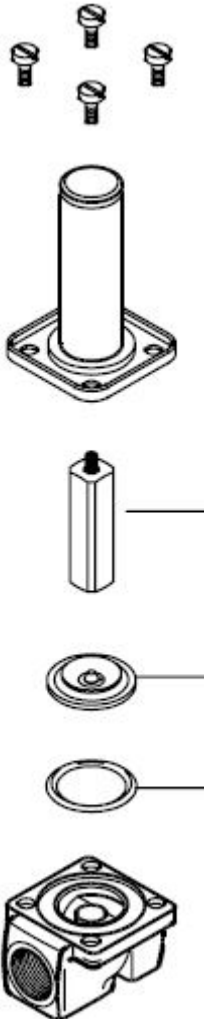


Disassemble the valve

Remove the four M4x6mm TORX T15 screws.

Clean the armature and armature housing, make sure both armature and spring moves smoothly

Clean the diaphragm, valve body and O-ring, make sure the small 1mm hole in the diaphragm is clean. Check the valve body for any signs of corrosion or damage. Lubricate rubber parts with silicone spray if possible

EV210B (small valve)

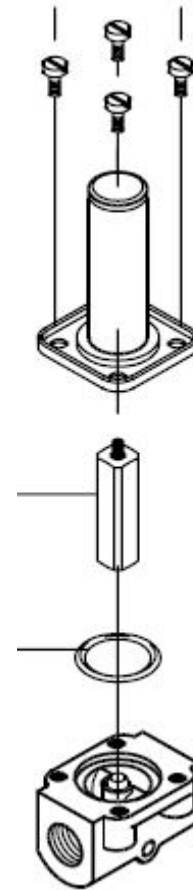

Clean the O-ring and valve body. Check the valve body for any signs of corrosion or damage. Lubricate rubber parts with silicone spray if possible

Reassemble the valve